

PR

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

TREE TRANSPLANTER

PR/ST/01



Transplanter is machine designed to transplanting of grown trees up to a trunk diameter of 15 cm. The machine is carried on the three-point hitch of the tractor and all functions are controlled by hydraulics. The machine is connected by quick connectors to the hydraulic circuit of the tractors.

There can be individually controlled: Spade 1-4 movement, opening of space for tree, machine lifting, machine deflection and lock.

The overall structure is welded and reinforced with thick-walled materials, making it all resistant to bending, cracking and other damage.

Using a Transplanter, the tree can be removed from the soil without disturbing the root system and transplanted to another designated location. Large use in forest and other facilities focused on growing trees.

Technical parameters

● Length	2,7 m
● Width	2,7 m
● Height	2,7 m
● Weight	1 200 kg
● Tractor power from	80HP kW
● Drive	Hydraulic circuit of tractor
● Hinge type	II - as specified by the customer
● Ground dig dimension	1,2m x 1,2m
● Engraving depth	0,8m - 1m (depending on the slope)
● Control	Manual - hydraulically
● Control	Spade 1 - 4
● Control	Openable cages
● Control	Tilt
● Control	Lifting
● Control	Frame lock
● Tree diameter	up to 15cm

TREE TRANSPLANTER - FRONT

PR/ST/02



Transplanter is machine designed to transplanting of grown trees up to a trunk diameter of 15 cm. The machine is carried on the front loader.

All machine's functions are controlled by hydraulics. The machine is connected by quick connectors to the hydraulic circuit of the front loader.

There can be individually controlled: Spade 1-4 movement, opening of space for tree and lock.

The overall structure is welded and reinforced with thick-walled materials, making it all resistant to bending, cracking and other damage.

Using a Transplanter, the tree can be removed from the soil without disturbing the root system and transplanted to another designated location. Large use in forest and other facilities focused on growing trees.

Technical parameters

● Length	2,2 m
● Width	2,35 m
● Height (minimum)	1,35 m
● Weight	1 400 kg
● Tractor power from	80HP kW
● Drive	Hydraulic circuit
● front loader type	as specified by the customer
● Ground dig dimension	1,2m x 1,2m
● Engraving depth	0,8m - 1m (depending on the slope)
● Control	Manual - hydraulically
● Control	Spade 1 - 4
● Control	Openable cages
● Control	frame lock
● Control by font loader	Lifting the machine + deflection
● Tree diameter	up to 15cm

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	