

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	



LUBRICATION HEAD COVER (LUBRICATOR)

SPARE PARTS - MAZNICE

PVC grease cap - M 8.

10860



LUBRICATING BALL HEADS - STRAIGHT THREADED GREASE NIPPLES

SPARE PARTS - MAZNICE

Among the most commonly used types of lubricators is definitely the straight ball lubricator. The grease gun consists of a sleeve for the grease press in a spherical shape. This spherical grease nipple is called straight because the grease nipple is mounted on the head in a straight direction, i.e. in the axis of rotation of the thread of the grease nipple. The grease nipples are manufactured according to DIN 71412. Thread: M6x1, M8x1, M10x1, M10x1.5



LUBRICATION HEAD SPHERICAL 90 DEGREES

SPARE PARTS - MAZNICE

Lubrication head spherical 90 degrees.
Thread: M8x1, M10x1



FLAT LUBRICATION HEADS - HEXAGONAL THREADED GREASE NIPPLES

SPARE PARTS - MAZNICE

Flat grease nipples - hexagonal threaded grease nipples.
Thread: M6x1, M8x1, M10x1, M12x1



LUBRICATION HEAD SPHERICAL 45 DEGREES

SPARE PARTS - MAZNICE

This spherical grease gun differs from the straight spherical grease gun only in the angle of the spherical connector for connecting the grease press. Compared to the straight grease fitting, the grease nipple is at a 45° angle to the grease fitting axis, thus providing better accessibility in some hard-to-reach areas.
Thread: M6x1, M8x1, M10x1, M12x1



LUBRICATING CHUCK COUPLING - 4 JAWS

SPARE PARTS - MAZNICE

55579

Lubricating chuck coupling - 4 jaws. Lubrication connectors are designed to connect the hose of the lubrication press and the lubricator when refilling the lubricating grease. Depending on the type of grease nipple, we must select the correct type of connector. For ball-type lubricators, chuck connectors (sometimes also jaw connectors) are used.



ANCHORING BOWL FOR RECESSING INTO THE FLOOR

SPARE PARTS - ACCESSORIES FOR TROLLEYS

900736

Anchoring bowl for recessing into the floor. The set includes: - 1x - Ring - 1x - Strap - 1x - Bowl. Load capacity: up to 300 daN.



ANCHORING EYE WITH SHACKLE

SPARE PARTS - ACCESSORIES FOR TROLLEYS

52031

Anchor eye with shackle 750 kg, galvanized.



LUBRICATION COUPLING SLIP-ON

SPARE PARTS - MAZNICE

Grease nipples - connectors for flat grease nipples.
Size: small coupling M0x1 - 10mm, large coupling M10x1- 16mm



PIN

SPARE PARTS - PINS

Galvanised pins
Diameter/length (mm): 14x55, 19x80, 21x155, 22x95, 22x165, 24x85, 25x115, 25x135, 28x105, 30x105, 30x125



ANGLE JOINT WITHOUT COTTER PIN

SPARE PARTS - JOINTS, FORK HEADS

Thread: M6x1, M8x1, M10x1, M14x1



FORK HEAD WITH PIN AND COTTER PIN

SPARE PARTS - JOINTS, FORK HEADS

Thread: M5, M6, M8, M10, M12, M14, M16



ANCHOR BOWL

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Anchoring bowl for floor mounting. Suitable for trailers.

900017



FORK HEAD WITHOUT PIN

SPARE PARTS - JOINTS, FORK HEADS

Thread: M8, M10, M12



ANGLE JOINT WITH COTTER PIN

SPARE PARTS - JOINTS, FORK HEADS

Thread: M6, M8, M10, M12



ANCHORING BOWL FOR RECESSING INTO THE FLOOR

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Anchoring bowl for recessing into the floor. Load capacity: up to 1500 daN.

55709



PIN 22X28X190MM

SPARE PARTS - PINS

900344



ANCHORING BOWL FOR RECESSING INTO THE FLOOR

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Anchoring bowl for recessing into the floor. Load capacity: up to 800 daN.

10872



TIP SLEEVE M20/M22, LENGTH 110 MM

SPARE PARTS - CASES

Tip sleeve M20/M22, length 110 mm.

900314(130239)



TIP SLEEVE M20/M22, LENGTH 145 MM

SPARE PARTS - CASES

Tip sleeve M20/M22, length 145 mm.

51620(190232)



PIN WITH BALL

SPARE PARTS - PINS

Diameter/length (mm): 30x80, 30x125



BALL HITCH

SPARE PARTS - PINS

Hinge ball \varnothing 50 mm, 7/8" UNF, length 140 mm.

52440



TRAILER COUPLING 50 MM DIAMETER

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Trailer towing coupling \varnothing 50 mm. Axle load 750 Kg.

5230(350420)



FRONT LOADER TIP

SPARE PARTS - CASES

The tip of the front loader.

Length: 0,8m, 1m, 1,2m



TRAILER TOWING COUPLING 60 X 60 MM

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Trailer coupling 60 x 60 mm. Axle load 750 Kg.

4014



TRAILER COUPLING 50 X 50 MM

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Trailer towing coupling 50 x 50 mm. Axle load 750 Kg.

51549(350423)



TRAILER COUPLING 60 MM DIAMETER

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Trailer towing coupling \varnothing 60 mm. Axle load 750 Kg.

6310(350421)



TRAILER COUPLING 70 MM DIAMETER

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Trailer towing coupling \varnothing 70 mm. Axle load 750 Kg.

5058(350422)




BALL HITCH

SPARE PARTS - PINS

Hinge ball \varnothing 50 mm, M20 x 1.5, length 144 mm

55780

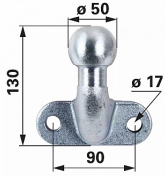

PULLING BALL WITH FLANGE

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Tension ball with flange pitch 90 mm, tensile load 3,000 kg, vertical load 200 kg.

52443(187050)



SPLITTING CONE FOR ENGINE

SPARE PARTS - SPLITTING CONE

Cleaving cone with a slotted hole for a pen. Diameter 74mm, length 250mm, length of cone part 140mm.

900814

Type of opening: D22/6, D24/8, D25/8, D28/8, D30/8, D32/10, D38/10



SPLITTING CONE FOR CIRCULAR MACHINE

SPARE PARTS - SPLITTING CONE

Splitting cone with thread for circular shaft.
Diameter 74mm, length 250mm, length of cone part 140mm



SUPPORT WHEEL-SLEEVE

SPARE PARTS - ACCESSORIES FOR TROLLEYS

Support wheel for trailers behind passenger vehicles, pipe \varnothing 48 mm, vertical load 100 kg. Support wheel clamp for \varnothing 48 mm.

55134



SPLITTING CONE FOR TRACTOR

SPARE PARTS - SPLITTING CONE

Splitting cones with six slotted holes. Splitting cones with six slotted hole for tractor. Diameter 98mm, length 300mm. Other diameters can be produced according to customer's special requirements.



SPLITTING CONE MOTOR_TRACTOR

SPARE PARTS - SPLITTING CONE

Splitting cone with interchangeable tip and attachment to engine or tractor.
Diameter 148mm

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	